




Plasticine on top of collets, release agent to alloy stock, then two part epoxy in cheekpiece holes (1/2 hole)

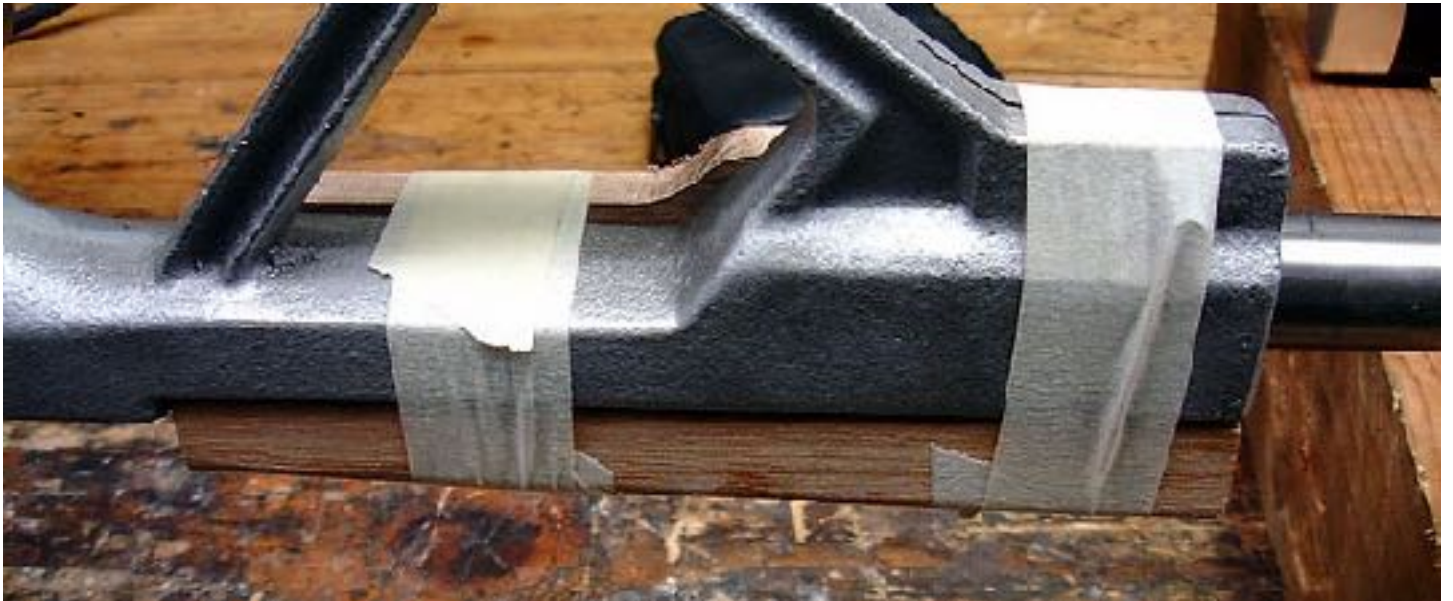

Tape into position, keep square (see below). Leave overnight for epoxy to harden. Remove tape and tap cheekpiece with a hammer to release, pare off excess epoxy, cleanup with sandpaper. Apply rubber and trim with new blade.

